Install player on older SAMSUNG home TV (ORSAY)

1 Connect (ORSAY) to internet

Press [Meniu] button once and navigate to [Network], pres [Enter], then select [Network settings]. Use settings provided from operator. Here you can select wired or wireless. After successful connection, yo internet connection. Press [OK] or [Close].

If you are provided with specify IP configuration, you can provide those settings when checking [Network Status], and after check select [IP Settings] from menu.

2 URL launcher links:

```
http://o.impressbox.eu/         /*for landscape orientation*/
http://o.impressbox.eu/pl       /*for portrait orientation*/
http://o.impressbox.eu/pr       /*If screen is installed as portrait, but data loading upside down*/
```

3 Setting URL launcher


Press [Meniu] button once, and navigate using Remote Controll arrows to the [System] section. Then from System navigate to section [Play via], select option [URL Launcher].



Menu screen



Meniu -> System

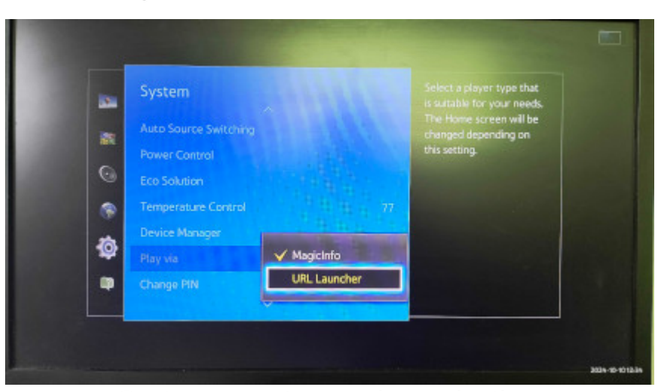

Menu -> System -> URL Laucher selection

If system selection [Play Via] is greyed and TV shows message: "This function isn't available" then you probably entered menu thru different way. All settings is available only if menu reache

- After setting, URL Launcher as default home screen time to begin configure player access:

Press [HOME] button on remote control to get homescreen:



Home screen with URL Launcher activated from Setup meniu
When you are in home screen, make sure that:

Time set is correct

Date set is correct

After all set, navigate with remote controll to [Change URL] section and press enter to enter URL launcher setup.



URL Launcher setup

Here you need provide correct URL from provided launcher links in first step. There are three options. Select right for your situation.

After all this steps, launch "URL Launcher" and pair screen to m.impressbox.eu system, to set playlist and etc.